



DPDT Foot Switch

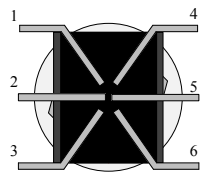

MPSA18
NPN BJT

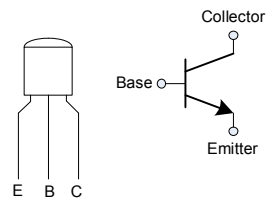

MODTM

www.modkitsdiy.com
Copyright © 2011 by modkitsdiy.com

**"The Thunderdrive" (K-950)
Schematic**